

# Composite Coupler

## Cleaning Manual

# Composite Coupler - Disassembling

Step 1: Remove the CO2-Adapter

Step 1



Step 2: Remove the Axis

Step 2



Step 3: Remove the Handle

Step 3



Step 4: Remove the Probe

Step 4



Step 5: Remove the two Springs

Step 5



Step 6: Remove the CO2-Gasket

Step 6



# Composite Coupler - Cleaning

Step 7: Remove the Gasket, the Lipvalve & the O-Ring

Step 8: Remove the Gasket, the two O-Rings, the Ball & Captive

Step 9: Clean the CO2-Adapter

Step 10: Clean the Probe

Step 11: Clean the Body





# Composite Coupler – assembling

Step 12

Step 12: Assemble the Gasket, the Lipvalve & the O-Ring

Grease the O-Ring

Step 13: Assemble the Gasket, the two O-Rings, the Ball & Captive

Grease the two O-Rings

Step 14: Assemble the coupler

Step 13

Step 14





# MICRO MATIC